



## Safety and cleaning instructions for LIINI®Night Station

Dear Customer,

Thank you for choosing our night station. We attach great importance to your safety and the well-being of your family.


To ensure that you can use your device safely, it is important to carefully follow the safety and cleaning instructions below. **Improper use can pose serious risks!**

### Manual / Operating instructions

We deliberately do not provide printed operating instructions, thereby saving several tonnes of paper every year. At the same time, we can update our electronic operating instructions at any time so that you always have the latest version at your fingertips.

Even though many functions can be operated intuitively, please take **five minutes to read through the manual**. It is important to use the product in accordance with the operating instructions so that you can enjoy it for a long time, everything works safely and unnecessary annoyance is avoided.

You can find the **operating instructions** via the following **QR code** (scan with your smartphone):

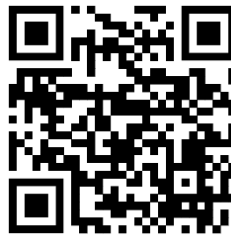

Available online: DE / EN / FR / IT

**Bankverbindung CHF:**  
IBAN: CH06 0021 0210 1087 0101 V  
BIC / SWIFT: UBSWCHZH80A

**Bankverbindung EUR:**  
IBAN: CH23 0021 0210 1087 0160 X  
BIC / SWIFT: UBSWCHZH80A

**Kontakt**  
LIINI GmbH  
Bahnhofstrasse 21  
4571 Lüterkofen  
Web: [www.LIINI.ch](http://www.LIINI.ch)  
E-Mail: [info@LIINI.ch](mailto:info@LIINI.ch)  
Tel: +41 79 559 06 02

**Rechtliches**  
UID: CHE-131.522.878 MWST  
Steuernr. DE: 09417/18455  
Umsatzsteuer-ID: DE352084049  
EORI-Nr: DE905090565529397  
Zollkonto ZAZ: 19867-7



#Feels Parenting.

## General information

Manufacturer	LIINI GmbH Bahnhofstrasse 21 4571 Lüterkofen Switzerland
Contact	compliance@liini.ch
Country of origin	China (CN)
Certifications	CE, RoHS
EU authorised representative	ProductIP AR Services Galvanistraat 1 6716 AE Ede The Netherlands (authorities only)
WEEE registration number (DE)	74241330  WEEE Register Nordostpark 72 90411 Nuremberg
WEEE registration number (AT)	9008392342860  Federal Ministry for Climate Protection, Environment, Energy, Mobility, Innovation and Technology (BMK) Radetzkystraße 2 1030 Vienna
WEEE registration number (LU)	MA1403  ecotrel asbl 11, Boulevard du Jazz 4370 Belvaux,
WEEE registration number (NL)	42125  Stitching OPEN Baron de Coubertinlaan 7 2719 EN Zoetermeer

**Bankverbindung CHF:**  
IBAN: CH06 0021 0210 1087 0101 V  
BIC / SWIFT: UBSWCHZH80A

**Bankverbindung EUR:**  
IBAN: CH23 0021 0210 1087 0160 X  
BIC / SWIFT: UBSWCHZH80A

**Kontakt**  
LIINI GmbH  
Bahnhofstrasse 21  
4571 Lüterkofen  
Web: [www.LIINI.ch](http://www.LIINI.ch)  
E-Mail: [info@LIINI.ch](mailto:info@LIINI.ch)  
Tel: +41 79 559 06 02

**Rechtliches**  
UID: CHE-131.522.878 MWST  
Steuernr. DE: 09417/18455  
Umsatzsteuer-ID: DE352084049  
EORI-Nr: DE905090565529397  
Zollkonto ZAZ: 19867-7



## General safety instructions (GPSR)

Improper cleaning and use can not only impair the function of your night station, but also lead to **serious safety risks**. Please observe the following instructions carefully:

### WARNING – Safety risks associated with improper use

- Improper cleaning can not only impair the function of the night station, but also lead to **serious safety risks**.
- **Never** clean the night station **in the dishwasher**, do not use it in a **steriliser** and do not wash it under **running water**.
- Water entering the device can cause **damage to electrical components**. This poses serious risks such as **short circuits, irreparable damage, fires, electric shocks or other accidents**.

### WARNING – Safety and functionality

- The night station must **only be used in accordance with the manual and manufacturer's instructions**.
- The product may **only be operated by adults**.
- The night station must be **checked for defects before each use**.
- Do **not** use **aggressive cleaning agents**, as these can cause cracks or discolouration in the housing. If the housing is damaged, the product must **not be used any further**.

### WARNING – Risk of burns and other hazards

- **Never touch the heating plate of the night station while it is warming or within the first 5 minutes after use**, as this may cause **severe burns**.
- The product must be kept **out of reach of your child at all times**. Children must **never play with the night station**.

### WARNING – Temperature control & feeding

- Check **the temperature of the milk on your wrist before feeding at night** to avoid burns.
- If you have any questions about your baby's nutrition, please consult your doctor.

### WARNING – Instructions for milk powder attachments

- **LIINI® milk powder attachments may be boiled in boiling water or sterilised in a steriliser for a maximum of 5 minutes**. Exceeding this time may result in deformation, leakage or loss of function. In such cases, **the warranty claim will be void**.



## Shelf life and replacement of milk powder attachments

The milk powder attachments are intended **exclusively** for the **short-term, temporary storage of milk powder**, especially for use during the night.

**Regular mechanical stress** – e.g. friction from the milk powder, repeated boiling or sterilisation – causes the attachments to undergo **natural wear and tear**. This particularly affects the integrated **silicone seals (closing membranes)**.

For **hygienic and functional reasons**, the milk powder attachments must be **replaced at least every three months**. Use beyond this period may impair the **seal, hygiene and functional safety** and is **not in accordance with the intended use**.

The milk powder attachments are therefore considered **wear parts**.

A **free replacement** will only be provided if there is **evidence of a material or manufacturing defect** within **three months of the date of purchase**. Changes or defects due to wear and tear that occur after this period or are attributable to normal wear and tear, improper use, excessive sterilisation or failure to follow the care instructions do **not** constitute a **defect within the meaning of the statutory warranty**.

## Use with breast milk

Freshly expressed breast milk can be stored at **room temperature between 10 °C and 29 °C for up to 8 hours** under **very clean conditions** (e.g. thorough hand washing before expressing, hygienically cleaned breast pump).

*This information is based on ABM Clinical Protocol No. 8 "Human Milk Storage Information" from the Academy of Breastfeeding Medicine.*

We recommend taking breast milk out of the refrigerator **immediately before bedtime** and placing it on the **LIINI® night station**. In the first months of life, babies typically need a night-time feed **every 2-3 hours**.

Internal practical tests have shown that **keeping** breast milk **warm or gently warming it up** over this period under the conditions described has **not** resulted in **any abnormalities** in terms of function or handling. However, these observations are **not** a substitute for **medical advice**.

The **shelf life and quality of breast milk** can vary greatly from person to person and depends on numerous factors, including the mother's **health, diet, lifestyle** and the **hygiene conditions** during pumping and storage. For this reason, it is **not** possible to make a **general statement about the shelf life** of breast milk.

If you are unsure or have specific questions, we strongly recommend that you consult a **midwife, lactation consultant or paediatrician**.

---

**Bankverbindung CHF:**  
IBAN: CH06 0021 0210 1087 0101 V  
BIC / SWIFT: UBSWCHZH80A

**Bankverbindung EUR:**  
IBAN: CH23 0021 0210 1087 0160 X  
BIC / SWIFT: UBSWCHZH80A

**Kontakt**  
LIINI GmbH  
Bahnhofstrasse 21  
4571 Lüterkofen  
Web: [www.LIINI.ch](http://www.LIINI.ch)  
E-Mail: [info@LIINI.ch](mailto:info@LIINI.ch)  
Tel: +41 79 559 06 02

**Rechtliches**  
UID: CHE-131.522.878 MWST  
Steuernr. DE: 09417/18455  
Umsatzsteuer-ID: DE352084049  
EORI-Nr: DE905090565529397  
Zollkonto ZAZ: 19867-7



## Tolerances for warming temperatures

During the development of the LIINI® night station, **bottle materials (glass and plastic)** and different **drinking quantities** were taken into account and carefully coordinated. The night station was calibrated and tested in **several hundred measurements** during development to ensure the most even and safe heating possible.

Due to the wide variety of **baby bottles** available on the market – particularly in terms of **shape, material, wall thickness, volume and design features** – it is technically impossible to guarantee **identical warming values without tolerances** for all bottle types.

For this reason, we would like to point out that the **temperature values displayed** may deviate **by up to  $\pm 3$  °C** from the actual temperature of the bottle contents.

The following baby bottles (both glass and plastic versions) have been tested by us and are **compatible and recommended for use with the LIINI® night station**:

- Philips Avent
- MAM
- NUK First Choice
- NUK Nature Sense
- NUK Perfect Match
- Medela

## Important note:

Regardless of the display, we recommend **always checking** the temperature of the bottle contents **with the wrist test before feeding** to avoid burns.

## Note on use with MAM plastic bottles

If you are using the LIINI® night station with **MAM plastic baby bottles**, please note the following: The **anti-colic and sterilisation system** used by MAM (in particular the base valve of the *Easy Start* plastic bottles) can **insulate** the heat output of the night station **more effectively**. Our tests with the LIINI® night station in combination with **MAM Easy Start plastic bottles** have shown that this can **result in a lower** drinking temperature than expected.

**Recommendation:** Select a **higher temperature setting** for MAM plastic bottles.

- If you want a drinking temperature of **37 °C**, programme the night station to **40 °C**.
- If you want a drinking temperature of **40 °C**, programme the night station to **45 °C**.